



Dependable | Innovative | Outstanding Quality

ECOSEAL REPAIR SYSTEM

USER GUIDE

Storage Guidelines

- Keep container upright and unopened
- Keep dry and avoid prolonged exposure to direct sunlight, rain and other adverse elements.
- Polyform should be stored between -20°C and 50°C

This information is intended as a guideline only. For more information please refer to Health & Safety MDS.

Equipment List

- Dispenser Gun
- Injection Line
- PPE




Step 1: Drill & Tap

Drill a 4mmØ pilot hole 10mm deep

Open out to 11/32"Ø and thread using a 1/8" BSP Tap

Please note you are only drilling a blind hole in step one

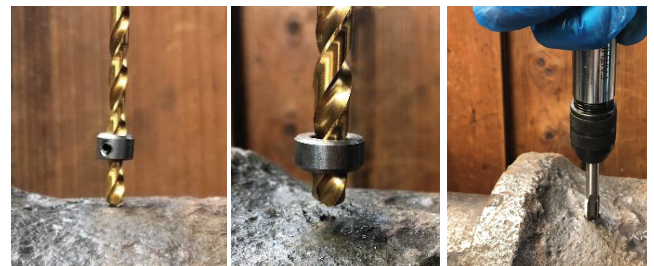

Step 2: Injection Body & Fitting

Tap the hole with a remove swarf using a magnet, screw the injection body into the hole.





Dependable | Innovative | Outstanding Quality

ECOSEAL REPAIR SYSTEM

USER GUIDE

Step 3: Injection Line Fitting

Drill a 4mmØ hole through the injection body until contact is made with the spigot, fit the injection line.



Step 4: Product Application

Dispense the required amount of sealant.



Step 5: Cap Fitting

Screw the cap onto the injection body fitting to complete seal, carry out a leak test, using detection fluid.



Step 6 : Completed Repair (Internal)

Backfilling can begin immediately. It is recommended that soft sand be used before replacing sharp stones.

